


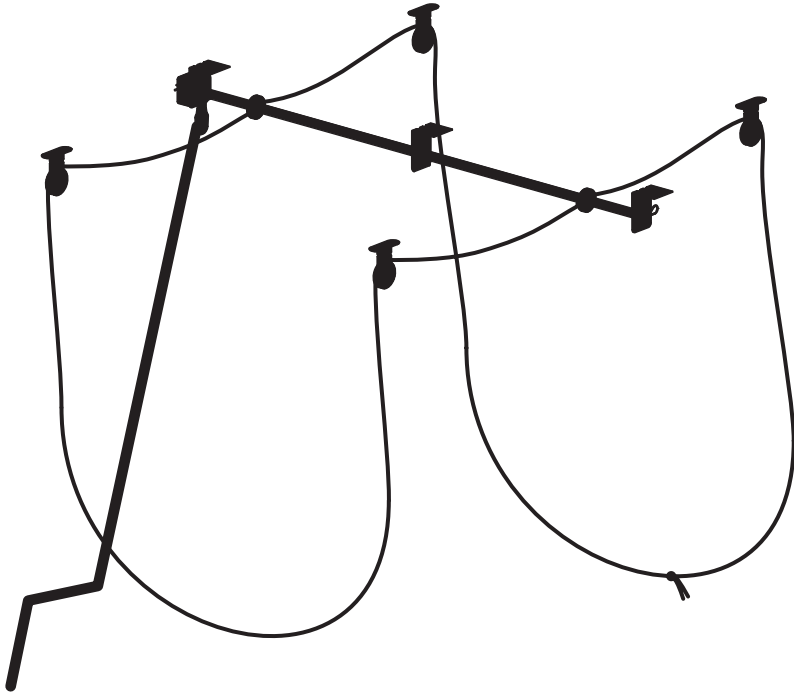
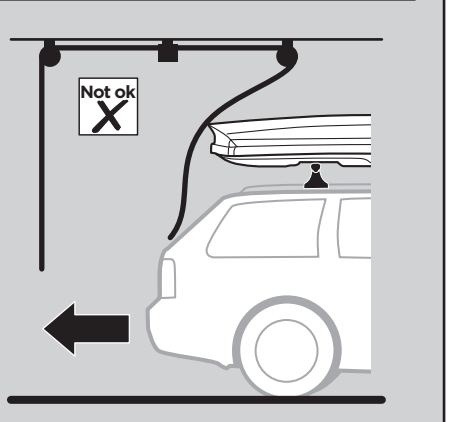
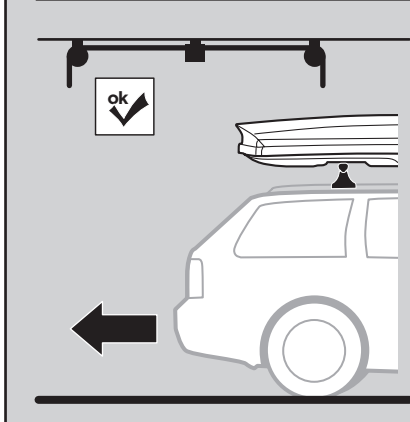
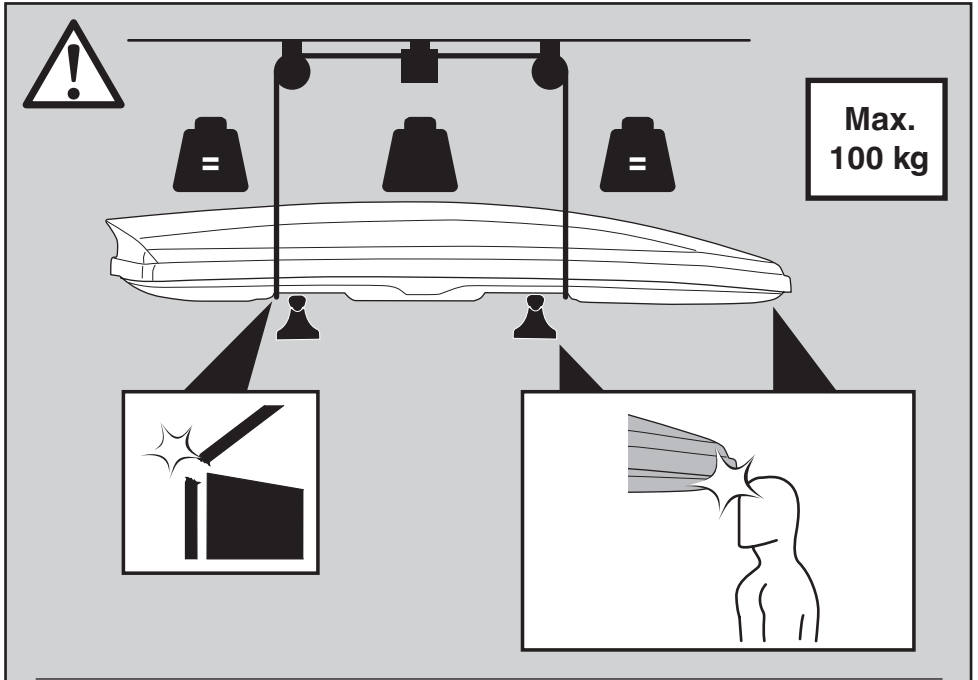
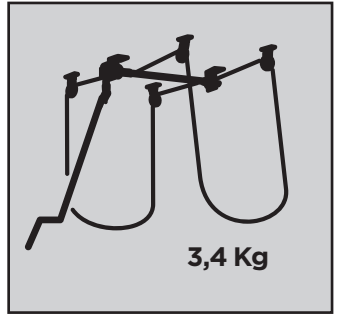





Thule MultiLift 572



# ➤ Instructions

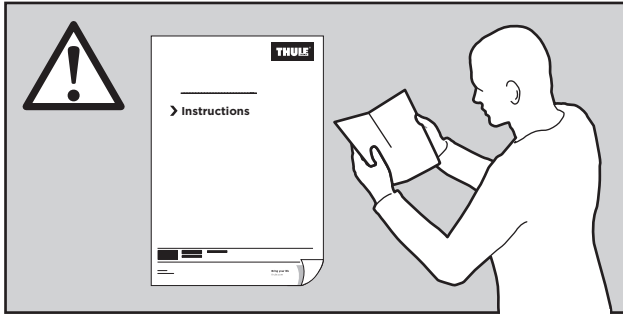

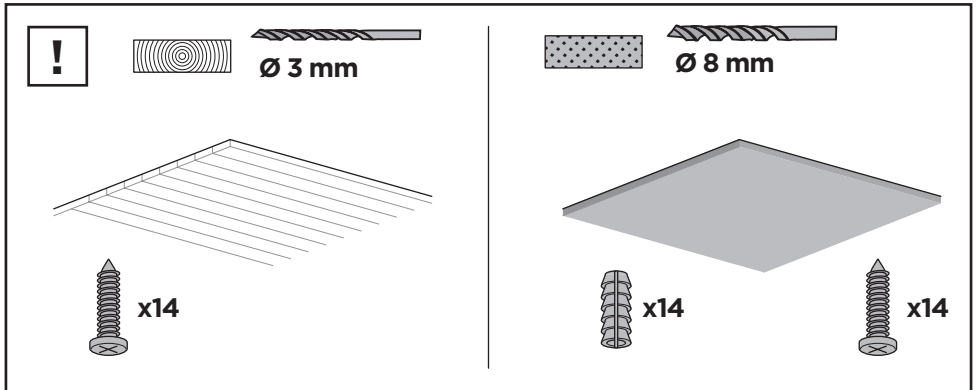

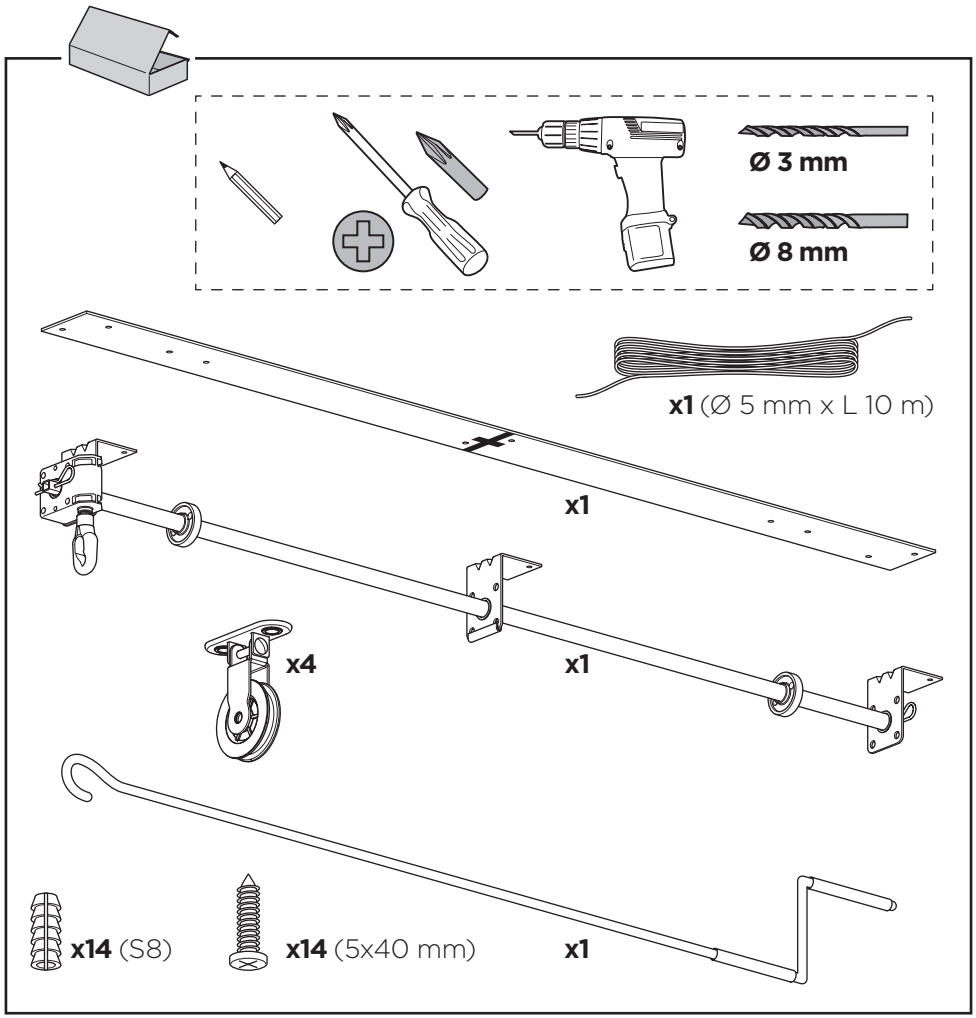

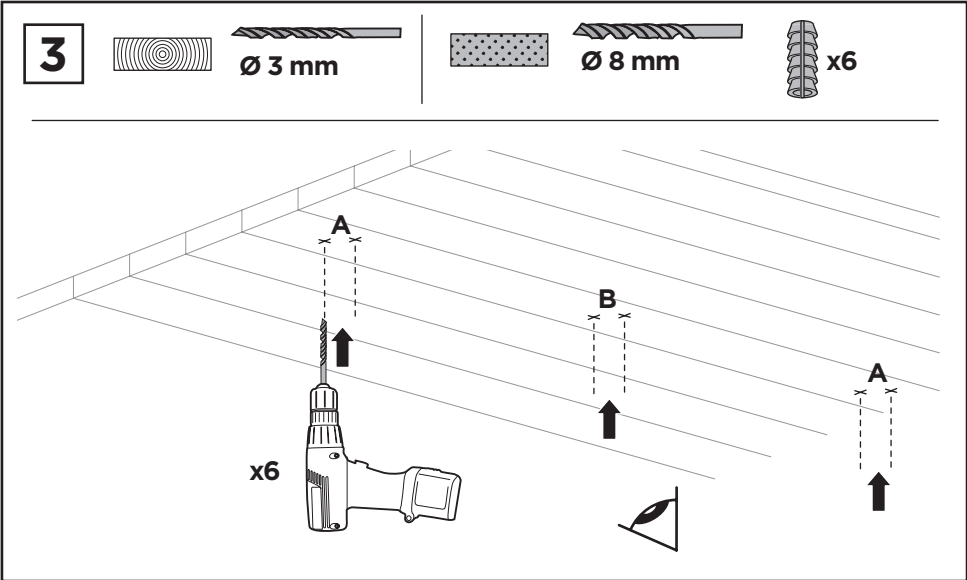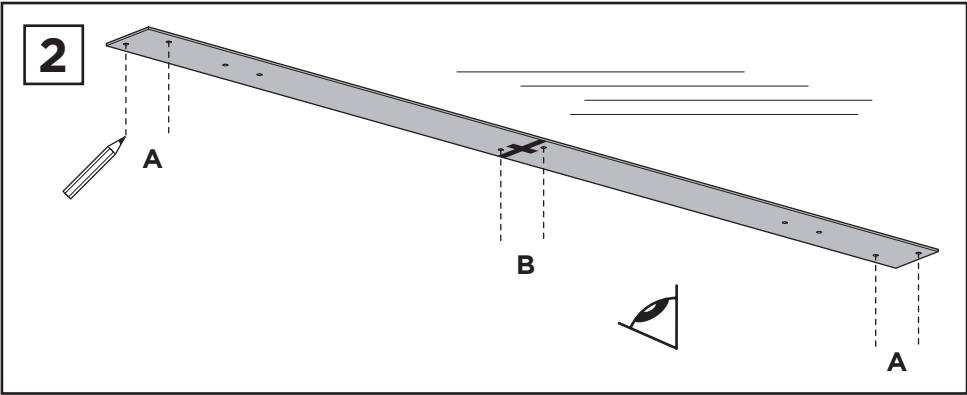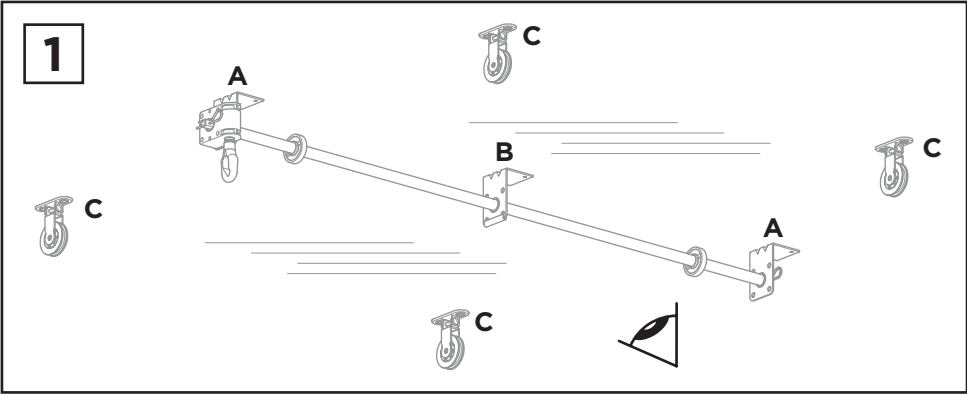

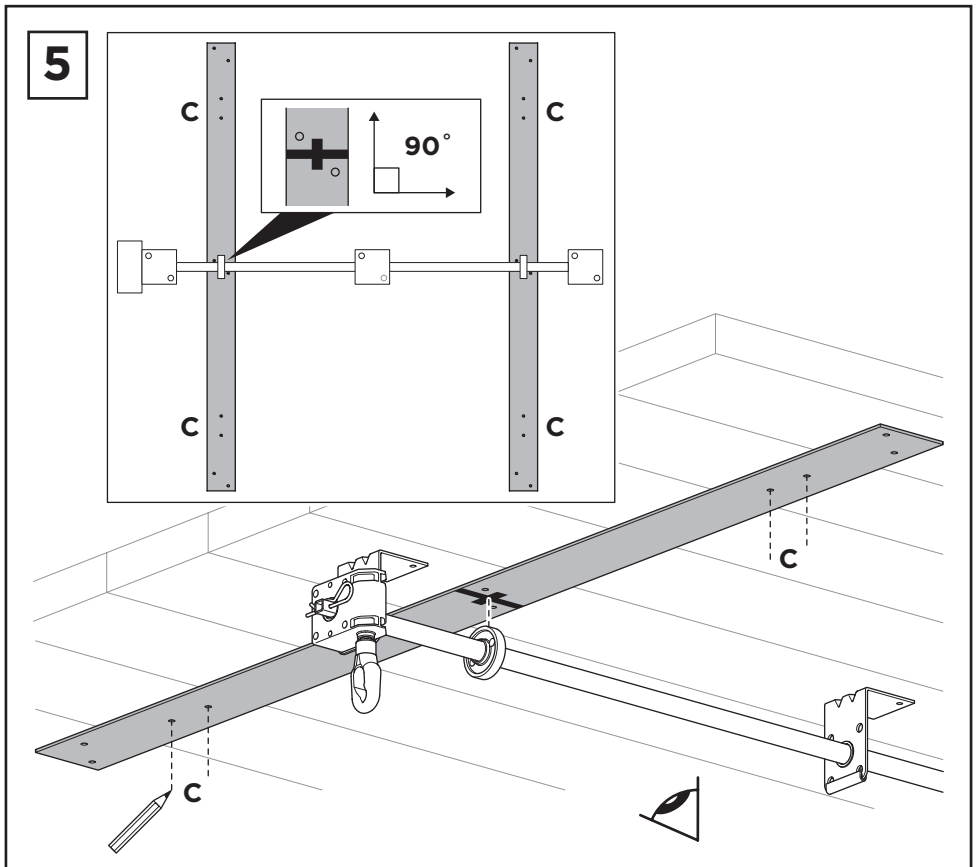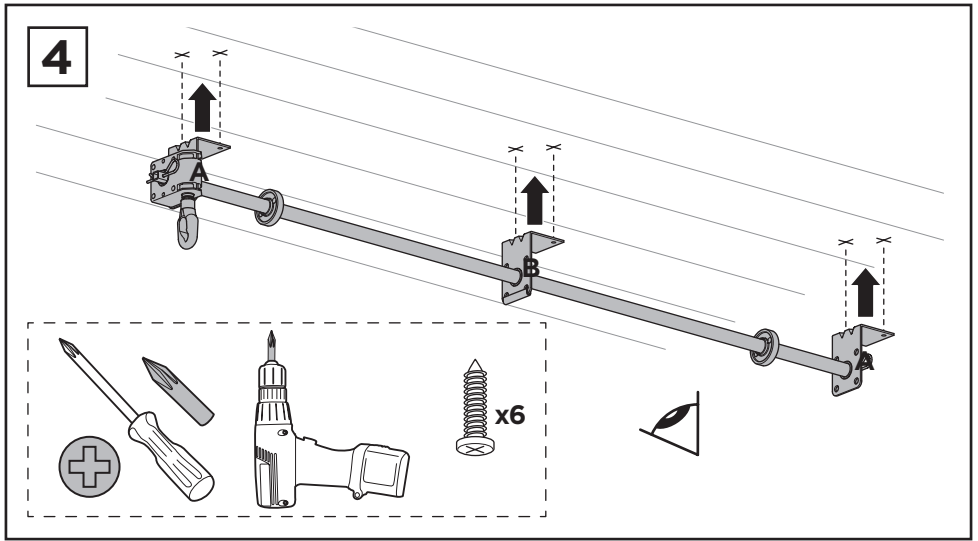

6




Ø 3 mm




Ø 8 mm





x8

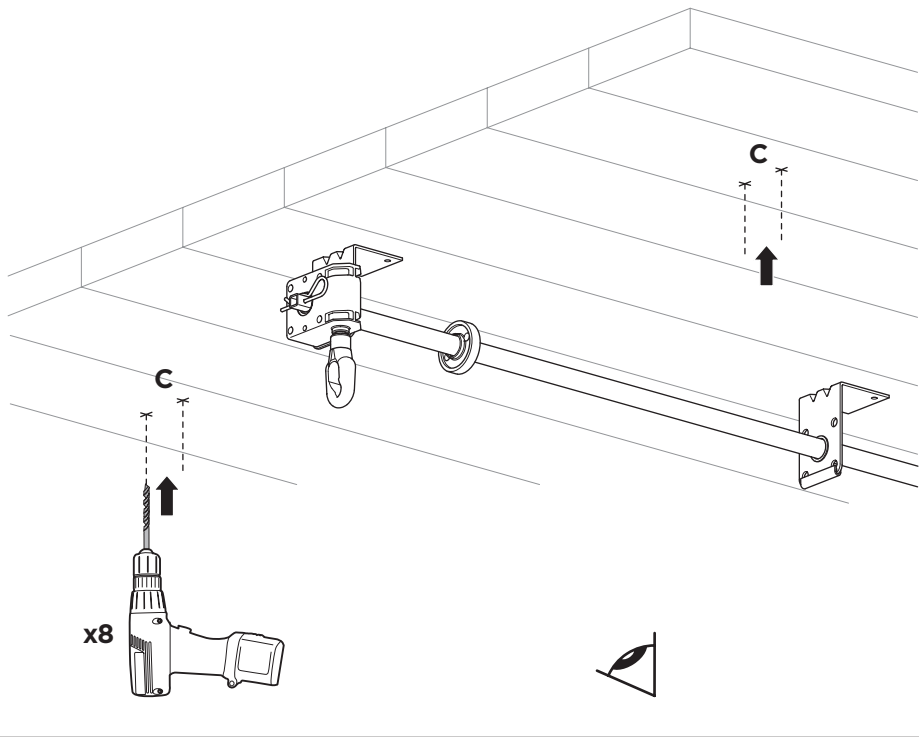

7



x4

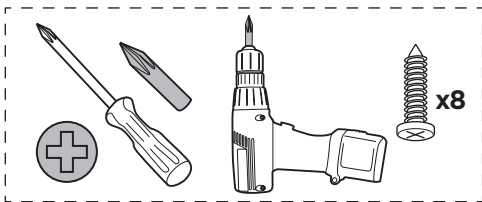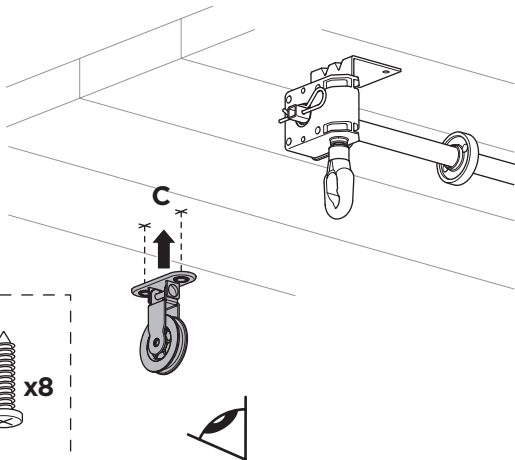

x8

8

